

CONTENTS

Camera	Display	01-03
Display Screen	Camera ON/OFF	
Card Reader	Unlock button	04
Touch Keypad	Lock button	
Doorbell	Handle (Turn left or right to unlock/lock)	05
Fingerprint Reader	Emergency turner (Normally do not use)	
Mechanical Key Hole		06
		07
		08
		09
		10
		11-16

1. Key Introduction

[*]: Return or quit [#]: Enter or confirm

2. User Introduction

The lock has 2 levels of users: Master, User;

Master: Can access by Fingerprint/Password/Card/Face, also can add or delete User;

User: Can access by Fingerprint/Password/Card/Face;

3. User Capacity

- 1) Master/Admin: 1 Master/Admin (ID is 00)
- 2) User: 99 Normal user (User ID is 01-99)

4. Lock Parameters

Unlock Ways: Fingerprint/Password/Card/Face/Mechanical key

Password Length: 6~12 digits password

Keypad Type: Touch Keypad

Fingerprint Reader: Semiconductor Fingerprint Reader

5. Factory status

Any password/fingerprint/card/face can unlock, all with the ID "00".


6. Setting Process

After assembling the lock, you should add at least 1 Master before adding User
The lock setting process as follow:



7. Power Display/Low Battery/Run Out Of Batteries/Charging Instructions

· Power Display

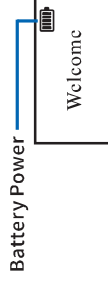


· Low Battery

When you unlock, you will hear 'Low Power' and the display will show;




· Run Out Of Batteries

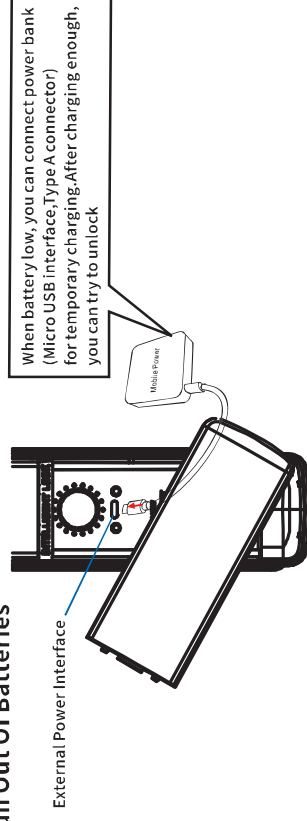

· Charging Instructions

- 1. External Power Interface uses MicroUSB (Type A connector/Universal data cable) to charge. You can use 5V, 1-2A adapter.
- 2. Normal charge time of lithium battery: 5 hours
- 3. When battery is charging, the power indicator light is red; When battery is full, the power indicator light is blue.

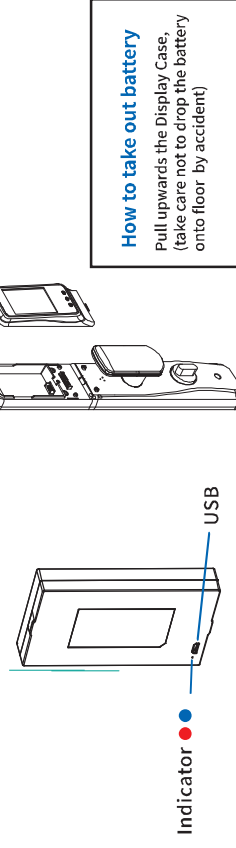


! Tips:

- 1. Distinguish the positive and negative poles before using.
- 2. Do not incinerate, short circuit, disassemble or crush the battery.
- 3. Over discharging and over charging will damage battery.
- 4. Protect the environment, waste batteries should be recycled according to the regulations



8. Annotation

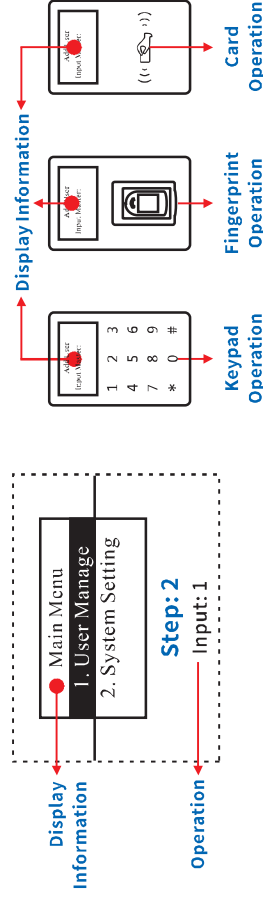


9. Attention On Registering/Reading Fingerprint

There are some wrong operations		
- Finger is dirty - Finger has water - Finger is injured badly	Finger is not in the reader centre	Have not put the whole finger
There are some right operations		
Fingers are clean	Finger is in the reader centre	Put the whole finger onto the centre

Warning: The finger too wet or too dry is not good for reading. If your finger is overdried, blow your finger with mouth before putting your finger to unlock.




Warning: You must make sure you can unlock with Mechanical key/Password/Fingerprint/Card/Face before closing the door.

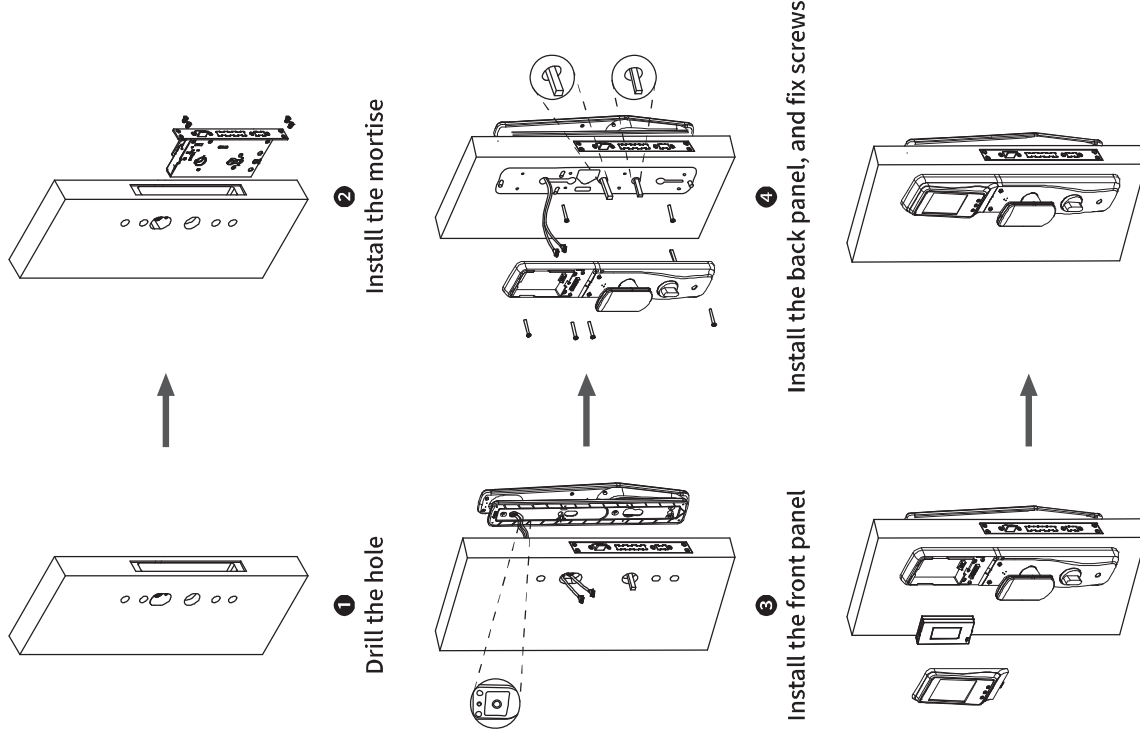


1. Note

After resetting, all the fingerprint/password/card/face information will be deleted. You can use any fingerprint/password/card/face to open lock.


2. Operation

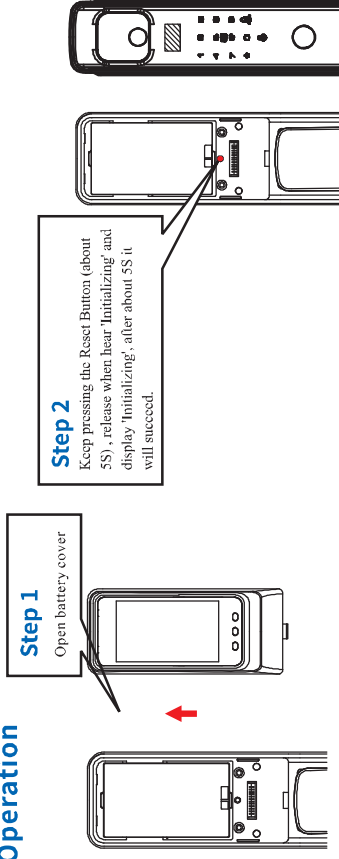

Installation setting

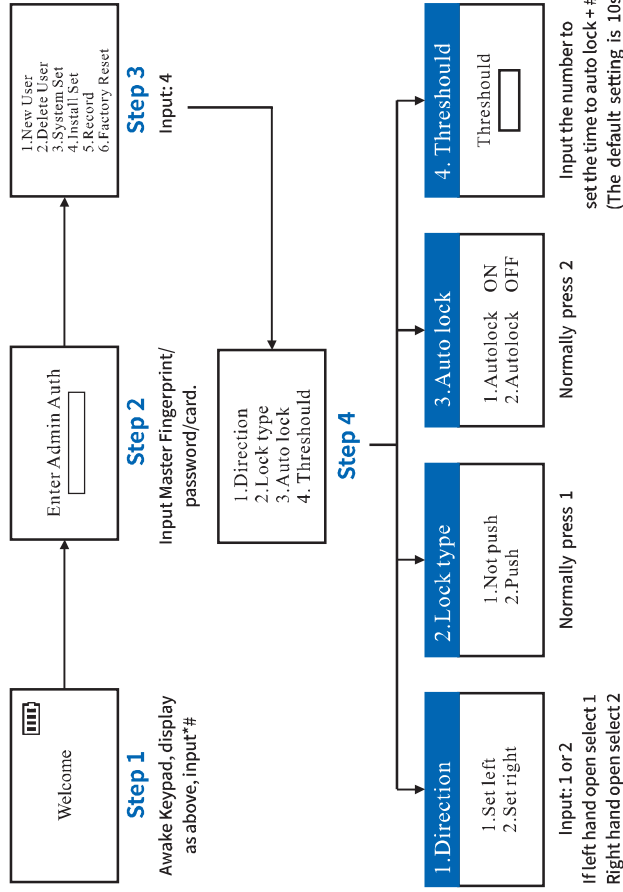


Add User

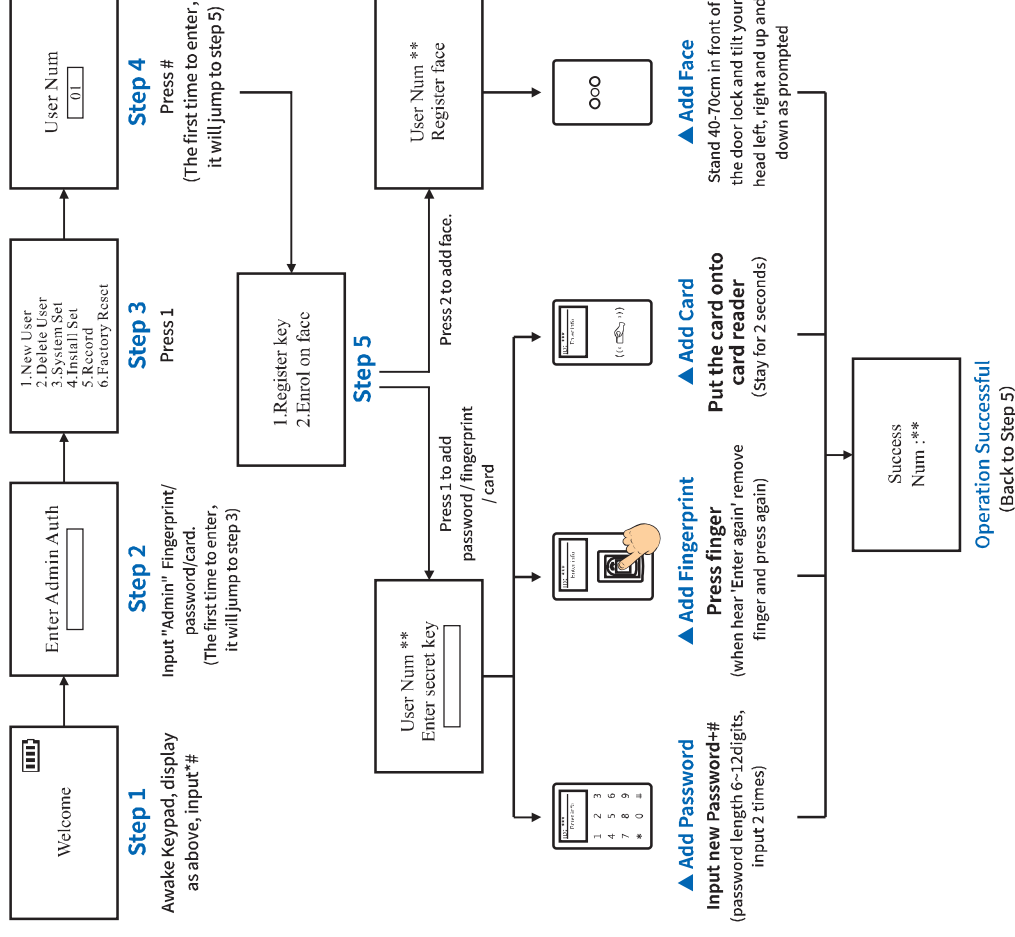


Tips:

1. The first time to enter, it will jump to step 3, please add the master first
2. Press ' * ' to return and ' # ' to enter.
- *3. Please touch palm to awake the Keypad.

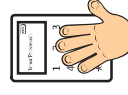

Awake Keypad


Delete User

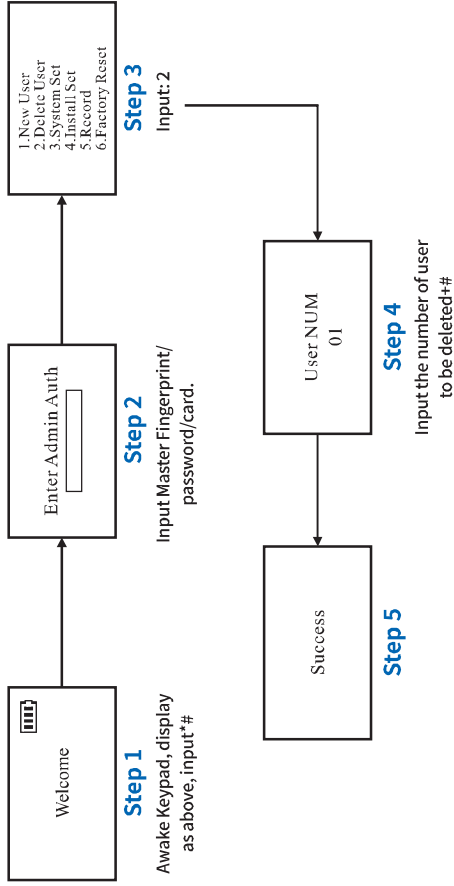

! Tips:


The admin's password/card/fingerprint/face can be deleted by reset.
If want to modify user's password/card/fingerprint/face,delete it then add.

Lock Setting

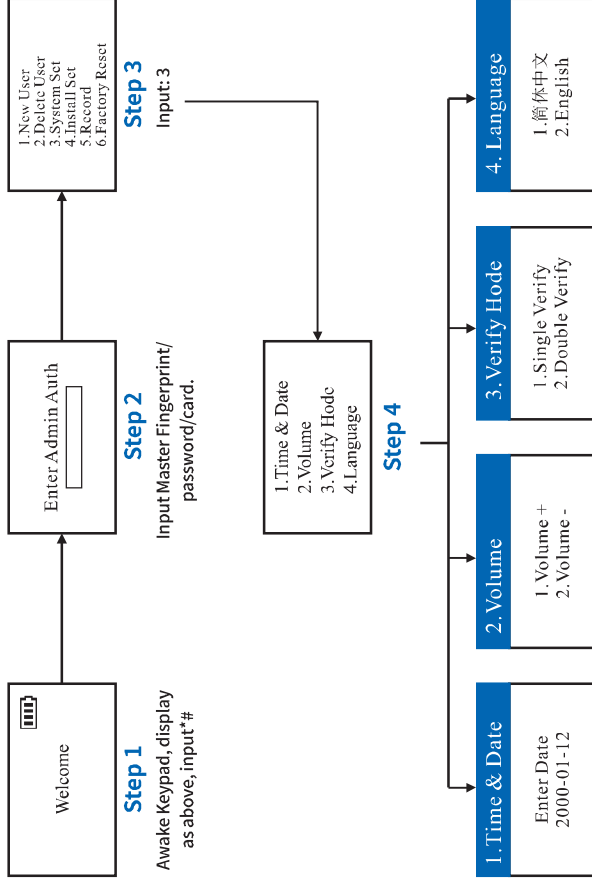


Unlock And Lock (Outside)

- 1. Unlock By Fingerprint**
Press finger (for 2 seconds)
- 2. Unlock By Password**
Input the correct Password+ #
- 3. Unlock By Card**
Put the Card onto Reader and stay for 2 seconds
- 4. Unlock By Face**
Stand 40-70cm in front of the door lock, and face at the camera.

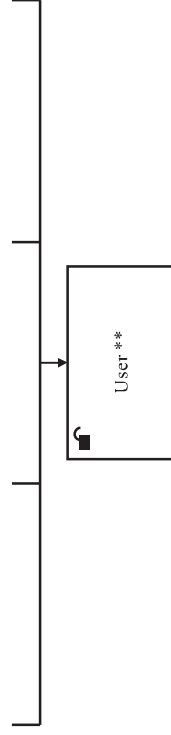

5. Unlock By Mechanical Key

If fail to unlock by Password/Fingerprint/Card, please use the Mechanical Key to unlock

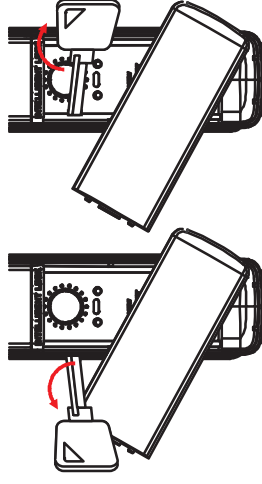

6. Lock Manually Outside




After close the door, press  button

How to open cylinder cover

Push and rotate the cylinder cover anticlockwise to open


Unlock And Lock(Inside)

1.Unlock/lock by handle

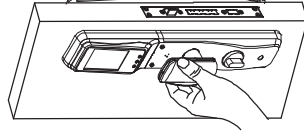


Rotate the handle left and right to quickly unlock/lock

2.Unlock/lock by electronic button

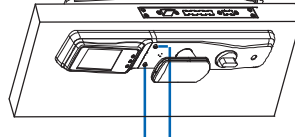

Electronic unlocking button
Electronic lock button

3.Deadbolt knob

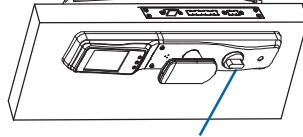

Deadbolt knob

Press and Rotate Deadbolt Knob to deadbolt lock or cancel deadbolt lock.

1. Download the App

Search "USmart Go"  on Apple App Store or Google Play for your iOS/Android device.

2. Basic Setting



1) Create an account

Launch the "USmart Go" App and register an account, you can register by your phone number or email address.





2) Setting Security Password

You'll need to setup a security password for two-step verification. Following the steps: Menu sidebar -> "My Settings" -> "Set security password".

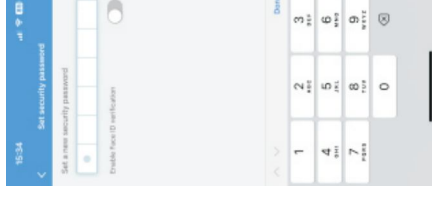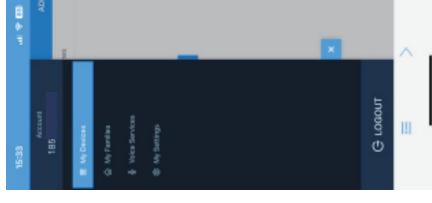


3) Create a Family

Every device associated with a Family, following the steps to create a family: Menu sidebar -> "My Families" -> "+" button.

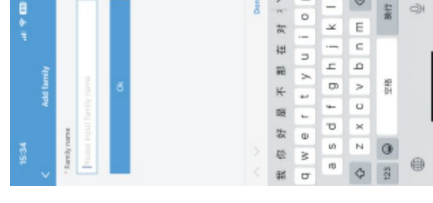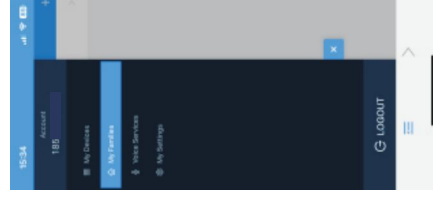


3. Connect the Lock


1) Launch the App, click the "ADD" button at the upper right corner, choose "QR code", you'll see a screen as below:

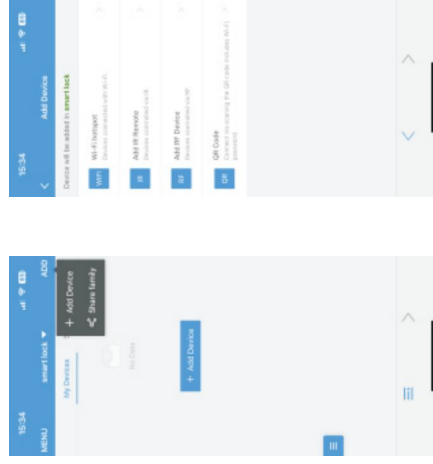


2) Set on lock as below

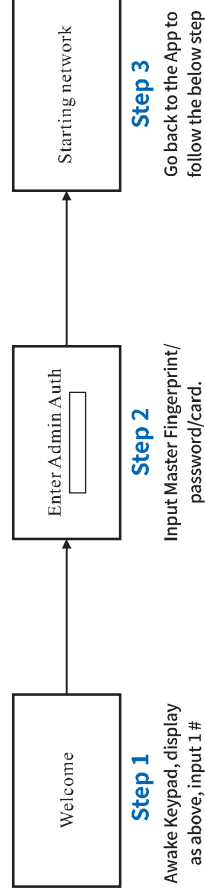

3) Please check the "Confirm to hear the prompt tone for scanning the QR code" and choose the "start connect".

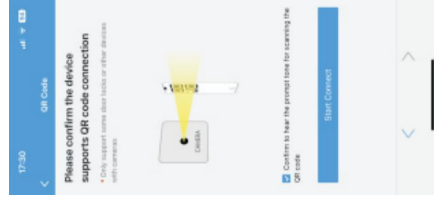

4) Choose the Wi-Fi of your home and input the password. Then click "next" to connect.

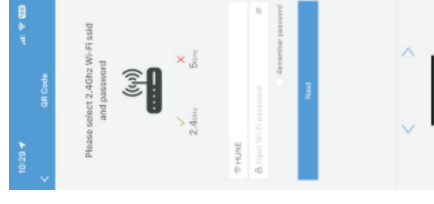

5) Use the Camera of the lock to scan the QR code of the mobile phone.






6) It will show "Registered successfully" when the lock connects to the network successfully.



4. USmart Go Function

1) Remote Unlock

Press "Δ" on the lock to trigger a remote unlock request, you'll see a popup window on our app, enter your security password to unlock.

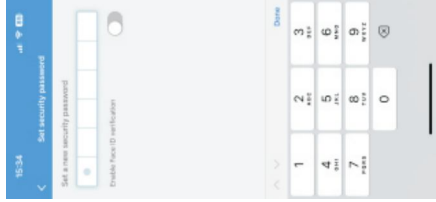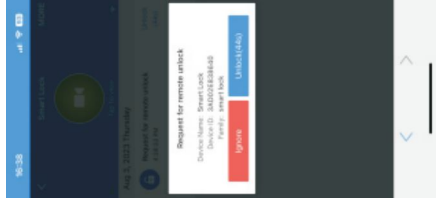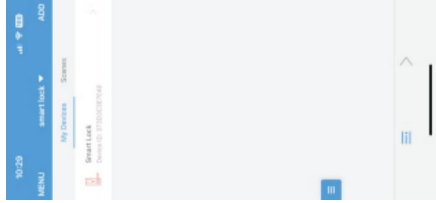

2) Remark an User

Click the event list to remark an user

